

nagold
—— by **HÄFELE**

538.01.051
Built-In Electric Oven
User Manual



ACKNOWLEDGMENT

Thank you for purchasing our product. We hope you enjoy using the many features and benefits it provides. Before using this product please study this entire Instruction Manual carefully. Keep this manual in a safe place for future reference. Ensure that other people using the product are familiar with these instructions as well.

WARNING

- When the oven is first switched on, it may give off an unpleasant smell. This is due to the bonding agent used for the insulating panels within the oven. Please run up the new empty product with the conventional cooking function, 250 °C, 90 minutes to clean oil impurities inside the cavity.
- During the first use, it is completely normal that there will be a slight smoke and odors. If it does occur, you merely have wait for the smell to clear before putting food into the oven.
- Please use the product under the open environment.
- The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.
- If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given

supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- During use, the appliance becomes very hot. Care should be taken to avoid touching heating elements inside the oven.
- Do not allow children to go near the oven when it is operating, especially when the grill is on.
- Ensure that the appliance is switched off before replacing the oven lamp to avoid the possibility of electric shock.
- The means for disconnection must be incorporated in the fixed wiring in accordance with the wiring specifications.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by person responsible for their safety.
- Accessible parts may become hot during use. Young children should be kept away.
- An all-pole disconnection means must be incorporated in the fixed wiring in accordance with the wiring rules.

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
- A steam cleaner is not to be used.
- The appliances are not intended to be operated by means of an external timer or separate remote-control system.
- The instructions for ovens that have shelves shall include details indicating the correct installations of the shelves.

SAFETY HINTS

- Do not use the oven unless you are wearing something on your feet. Do not touch the oven with wet or damp hands or feet.
- For oven: Oven door should not be opened often during the cooking period.
- The appliance must be installed by an authorized technician and put into use. The producer is not responsible for any damage that might be caused by defective placement, and installation by unauthorized personnel.
- When the door or drawer of oven is open do not leave anything on it, you may unbalance your appliance or break the door.
- Some parts of appliance may keep its heat for a long time; it is required to wait for it to cool down before touching onto the points that are exposed to the heat directly.
- If you will not use the appliance for a long time, it is advised to plug it off.

FITTING THE OVEN INTO THE KITCHEN UNIT

Fit the oven into the space provided in the kitchen unit; it may be fitted underneath a work top or into an upright cupboard. Fix the oven in position by screwing into place, using the two fixing holes in the frame. To locate the fixing holes, open the oven door and look inside. To allow adequate ventilation, the measurements and distances adhered to when fixing the oven.

IMPORTANT

If the oven is to work properly, the kitchen housing must be suitable. The panels of the kitchen unit that are next to the oven must be made of a heat resistant material. Ensure that the glues of units that are made of veneered wood can withstand temperatures of at least 120 °C. Plastics or glues that cannot withstand such temperatures will melt and deform the unit, once the oven has been lodged inside the units, electrical parts must be completely insulated. This is a legal safety requirement. All guards must be firmly fixed into place so that it is impossible to remove them without using special tools. Remove the back of the kitchen unit to ensure an adequate current of air circulates around the oven. The hob must have a rear gap of at least 45 mm.

DECLARATION OF COMPLIANCE

When you have unpacked the oven, make sure that it has not been damaged in any way. If you have any doubts at all, do not use it: contact a professionally qualified person. Keep packing materials such as plastic bags, polystyrene, or nails out of the reach of children because these are dangerous to children.



PRODUCT DESCRIPTION



| Symbol | Function description |
|--------|---|
| | Oven Lamp: which enables the user to observe the progress of cooking without opening the door. |
| | Defrost: The circulation of air at room temperature enables quicker thawing of frozen food, (without the use of any heat). It's a gentle but quick way to speed up the defrosting time and thawing of ready-made dishes and cream filled produce etc. |
| | Bottom heat: A concealed element in the bottom of the oven provides a more concentrative heat to the base of food without browning. This is ideal for slow cooking dishes such as casseroles, stews, pastries and pizzas where a crispy base is desired. The temperature can be set within the range of 60-120°C. The default temperature is 60°C. |
| | Conventional cooking: The top and bottom work together to provide convectional cooking. The temperature can be set within the range of 50-250°C. The default temperature is 220°C. This is optional function that can be work with rotisserie motor. |
| | Convention with fan: Combination of the fan and both heating element provides more even heat penetration, saving up to 30-40% of energy. Dishes are lightly browned on the outside and still moist on the inside. Note: This function is suitable for grilling or roasting big pieces of meat at a higher temperature. The temperature can be set within the range of 50-250°C. The default temperature is 220°C. |
| | Radiant grilling: The inner grill element switches on and off to maintain temperature. The temperature can be set within the range of 180-240°C. The default temperature is 210°C. This is optional function that can be work with rotisserie motor. |
| | Double grilling: The inside radiant element and top element are working. The temperature can be set within the range of 180-240°C. The default temperature is 210°C. This is optional function that can be work with rotisserie motor. |
| | Double grilling with fan: The inside radiant element and top element are working with fan. The temperature can be set within the range of 180-240°C. The default temperature is 210°C. |
| | Convection: An element around the convection fan provides an additional source of heat for convection style cooking. In convection mode the fan automatically comes on to improve air circulation within the oven and creates an even heat for cooking. The temperature can be set within the range of 50-240°C. The default temperature is 180°C. |

OPERATION INSTRUCTIONS

1. Clock Setting

After connecting the unit to the power, the symbols "0:00" will be visible on the display.

- 1> Press "⌚", the hour figures will flash.
- 2> Press "◀>" to adjust the hour figures, (Time should be within 0–23).
- 3> Press "⌚", the minutes will flash.
- 4> Press "◀>" to adjust the minutes setting, (time should be within 0-59).
- 5> Press "⌚" to finish the clock settings. ":" will flash, and the time will be illuminated.

Note: The clock is 24 hours. After power on, if not set, the clock will show "0:00".

2. Function Setting

- 1> Press "F" to choose the cooking function you require. The related indicator will illuminated.
- 2> Press "◀>" to adjust the cooking time and adjust the temperature before press "⌚" to switch.
- 3> Press "⌚" to confirm the start of cooking.
- 4> If step 2 is ignored, Press "⌚" to confirm the start of cooking. and the default time is 9 hours, the default temperature will display on the LCD.

Step Quantity:

- 1> The time intervals for the setting cook time is as below:
0–0:30min: step 1 minute 0:30–9:00hour :step 5 minutes
- 2> The temperature interval for the adjustment of temperature is 5°C, and "⌚" "⌚" can not adjust the temperature.
- 3> Press "◀>" to adjust the cooking time when cooking begins. Then press "⌚" to start cooking.
If "⌚" not pressed within 5 seconds, the oven will revert back to the previous time to continue cooking.
- 4> Press "⌚", the "⌚" will show, then press "◀>" to adjust the temperature when cooking begins.
Then press "⌚" to start cooking. If "⌚" not pressed in 5 seconds, the oven will revert back to the previous temperature to continue cooking.

3. Lamp Setting

- 1> Press "F" to select the relevant function, then the corresponding icon will be on.
- 2> Press "⌚" button to start, "0:00" and lamp icon "⌚" will light up, ":" will flash.

4. Inquiring function

During cooking process, you can use inquiring function, after 3 seconds return to the current working state.

- 1> During cooking mode, press "⌚" button to see the current time.
- 2> If the reminder function was set, press "⌚" button to see the current time.

5. Child lock function

To Lock : press "⌚" and "⌚" simultaneously for 3 seconds, there will be a long "beeping" sound and the "⌚" will be illuminated.

Lock quitting : press "⌚" and "⌚" simultaneously for 3 seconds, there will be a long "beeping" sound indicating the child-lock is released.

Note: During working mode, if you want to stop cooking, press stop button quickly. Do not need to long pressing on stop button, it is invalid.

6. Reminder Function:

The oven has 9 hours reminder, this function will help to remind you to start cooking in a certain time from 1 minute to 9 hours. Only when oven in standby mode, the reminder can be set. Follow below to set the reminder:

- 1> Press reminder setting button "⏸" and the display shows "🕒" and "AL";
- 2> Press "<>" to set the time of reminder.
- 3> Press "▶" to confirm setting. ":" will be flash and the indicator for reminder "🕒" will light. The time will count down.

Note: The oven buzzer will sound for 10 times after the time back to the zero hour. "🕒" symbol disappears on the screen to remind you to start cooking. You can cancel the reminder during setting by pressing the stop button; After the reminder has been set, you can cancel it by pressing stop button twice.

7. Reservation Function

Only when the clock has been set, delay function can be used.
In standby mode,

- 1, Press "⏸" 2 times, the display shows "⏸" and "End".
- 2, Press "< >" to set the hour of the cooking ending time of reservation.
- 3, Press "⏸" button again;
- 4, Press "< >" to set the minute of the cooking ending time of reservation.
- 5, Press "F" to choose the cooking function you require.
- 6, After set the cooking time and temperature, press "▶" to start.

Note:

Subtract the cooking time from the cooking ending time, you will get the time that oven starts to cook.

8. Start/Pause/Cancel Function

- 1> If the cooking time has been set, press "▶" to start cooking. If the cooking is paused, press "▶" to resume cooking.
- 2> During cooking process, press "⏏" once to pause the cooking. Press "⏏" twice to cancel the cooking.

9. Energy-Saving Function

- 1> During in waiting state and reminding state, press "▶" for three seconds, the LCD display will go off and set to energy-saving mode.
- 2> If no operation in 10 minutes under waiting state, the LCD display will go off and go into energy-saving mode.
- 3> Under the energy-saving mode, press any key or rotate any knob can quit the energy-saving mode.

10. Meat probe function:

1> In waiting state, insert the meat probe, the LED will display "PROB" and the icon "🍖" will light.

2> Rotate "K1 " to choose function you need. The related indicator will illuminated.

Functional sequence diagram: . Press " " to confirm function setting.

3> Rotate "K2" to adjust the temperature. Press "▶" to confirm temperature probe.

The small LED display the temperature and the big LED display "PROB".


4>The buzzer will sound five times when cooking finish. The setting temperature lights when the setting temperatures arrives. If the meat probe pulled out, it will turn back to waiting state.

Note: A) The range of the temperature is 50-150 degrees. B) During probe function, the cooking time can not be set. C) During cooking process, press stop button once, it will stop cooking, LED flash;

Press stop button again, cancel the current cooking. D) Pull out the meat probe from the oven, it will cancel all the program. E) If the display shows "Er-3" after the programme has been started, it means that the temperature sensor short circuit. Please check the sensor carefully by authorized.

11. Note

1>The oven lamp will be on for all functions.

 
2> Once the cooking programme has been set and the "  " button is not pressed within 5 minutes, the current time will be displayed or turn back to waiting state. The setting program will be invalid.

3>The buzzer sounds when effectively pressed, if not effectively pressed there will be no response.

4> The buzzer will sound five times to remind you when cooking has finished.


ACCESSORIES

Meat probe : Before using, insert the probe into the center of the thickest portion of meat or into the inner thigh or breast of poultry, away from fat or bone. Place food in oven and connect the meat probe. Keep probe as far away from heat source as possible. Close oven door.




ROTISSERIE SKEWER:

 
The average speed of the motor heat the food evenly.
At the same time, it can guarantee the nutrition of the food.



 
Wire shelf : For grill .dishes, cake pan with items for roasting and grilling.




Slider bracket : These shelf support rails on the right and left sides of the oven can be removed for cleaning oven walls.
(only for specific modles)

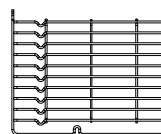

Universal pan: For cooking large quantities of food such as moist cakes, pastries, frozen food etc, or for collecting fat/ spillage and meat juices.

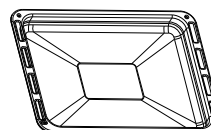


Telescopic runner: Some of models might with telescopic runners to facilitate the use of oven.
These telescopic runners could be disassembled for cleaning by unscrew the screws use to fix it.
(only for specific modles)

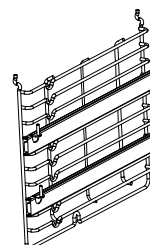


SHELF PLACEMENT WARNING:

To ensure the oven shelves operate safely, correct placement of the shelves between the side rail is imperative. This will ensure that during careful removal of the shelf or tray, hot food items should not slide out.

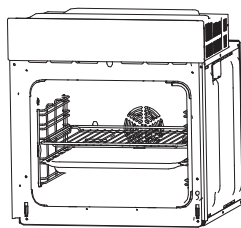


OR

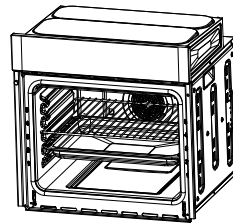


USE OF ROTISSERIE ACCESSORIES

The rotisserie works in combination with the grill element to heat the food equally. At the same time, it can guarantee the nutrition of the food.

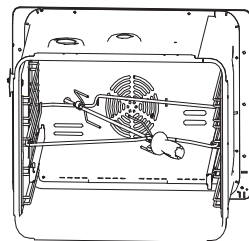


OR

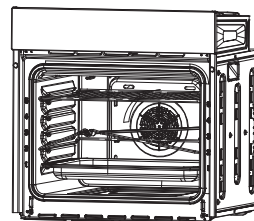

BULB REPLACEMENT


For replacement, process as follows:

- 1>.Disconnect power from the mains outlet or switch off the circuit breaker of the unit's mains outlet.
- 2>.Unscrew the glass lamp cover and replace the bulb with a new one of the same type.
- 3>.Screw the glass lamp cover back in place.

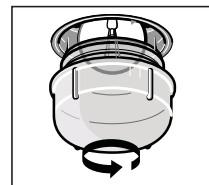


SECURING THE OVEN TO THE CABINET


1. Fit oven into the cabinet recess.
2. Open the oven door.
3. Secure the oven to the kitchen cabinet with two distance holders "A" which fit the holes in the oven frame and fit the two wood screws "B".

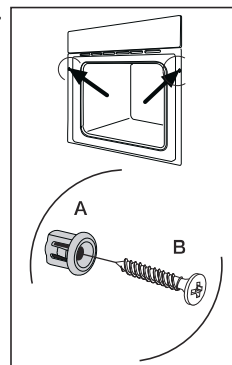

CONNECTION OF THE OVEN

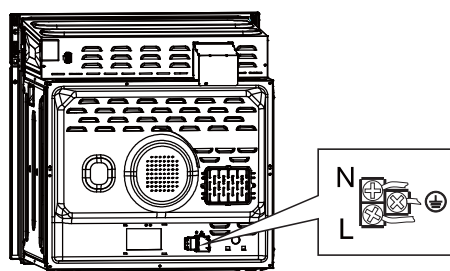

INSTALLATION

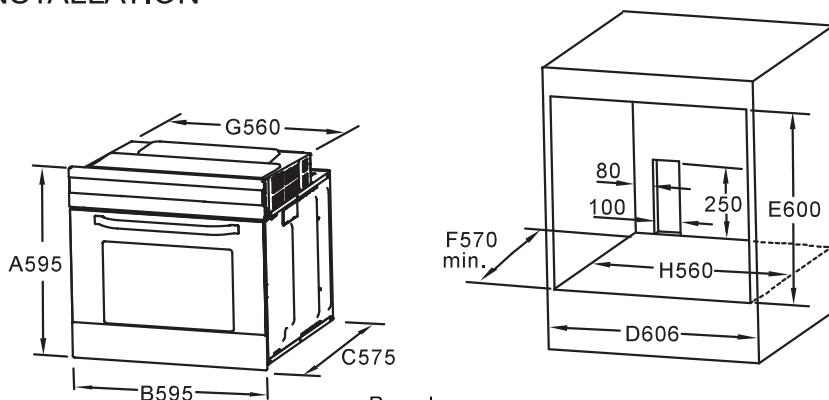

Remark:

1. Only plus deviations are admissible for all dimension.
2. The cabinet is not include the power switch or socket.

NOTE: The number of accessories included depends on the particular appliance purchased.

CLEANING AND MAINTENANCE

Keep the appliance clean for long service life and clean aesthetics. The modern design of the unit calls for minimal cleaning and maintenance. The parts of the unit which come into contact with food have to be cleaned regularly.

- Before any maintenance and cleaning, disconnect the power.
- Set all controls in the OFF position.
- Wait until the inside of the unit is not hot but only slightly warm- cleaning is easier than when warm.
- Clean the surface of the unit with a damp cloth, soft brush or fine sponge and then wipe dry.
In case of heavy soiling, use hot water with non- abrasive cleaning product.
- For cleaning the glass of the oven door, do not use abrasive cleaners or sharp metal scrapers, these can scratch the surface or lead to the glass being damaged.
- Never leave acidic substances (lemon juice, vinegar) on stainless steel parts.
- Do not use a high pressure cleaner for cleaning the unit. The baking pans may be washed in mild detergent.

This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE).

By ensuring this product is disposed correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The symbol on the product indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.





Dear Customer,

Hafele is dedicated to add more functionality to your daily lives thus making life more easy and comfortable and we continually strive to provide our customers with the best controls in the industry.

If you have any technical questions related to this product or the installation of any of our built in range of appliances, please feel free to call our customer care number at 1800 2666667 or visit our website at www.hafeleindia.com

Warm Regards,

Technical Team

Hafele India Pvt. Limited

CUSTOMER COPY

| | | |
|------------------------|---|-------------------------|
| Customer Name: | _____ | <div>Dealer Stamp</div> |
| Customer Address: | _____ | |
| Invoice Number: | _____ | |
| Product Article Code: | _____ | |
| Product Serial Number: | _____ | |
| Date of Purchase: | <div>__ / __ / ____</div> <div>DD / MM / YYYY</div> | |

DEALER COPY

| | | |
|------------------------|---|-------------------------|
| Customer Name: | _____ | <div>Dealer Stamp</div> |
| Customer Address: | _____ | |
| Invoice Number: | _____ | |
| Product Article Code: | _____ | |
| Product Serial Number: | _____ | |
| Date of Purchase: | <div>__ / __ / ____</div> <div>DD / MM / YYYY</div> | |

This appliance is warranted by Hafele India Pvt. Limited to be free from defects in materials and workmanship for a period of **12 Months** from the date of installation.

You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. In the event of a minor failure, HIN reserves the right to choose to repair or replace the appliance.

To make a warranty claim, you must be able to supply proof of purchase. In the first instance, you should call our Customer Care - 1800 2666667. HIN will create and retain a computer record of your application. HIN will bear any expenses incurred for warranty claims, excluding the cost of transport of the appliance for service or the service agents travelling costs to and from your home if you live outside the service area of HIN or one of its service agents.

- The defective spare part / Parts shall be the sole property of Hafele India and will be collected by the Authroised Service Franchisee / Partner
- The warranty does not cover any accessories external to the system or supplied by dealer
- The unit will be repaired / part replaced by authroised service engineer only, warranty will not cover if unauthorized person repair / installation done
- Any defect in the electrical, plumbing, other fitting outside product shall have to be rectified by the purchaser only
- Hafele shall not be liable for any delay in rectifying the product, in the event of non-availability of components and shall in no way be responsible for any losses: direct or indirect: arising out of the delay: if any
- Warranty shall stand ceased / cancelled if the product is used for any type of commercial purpose
- Defect that have occurred due to causes beyond our control like lighting, abnormal voltage or damage occurred due forced majeure acts
- If the installation site condition does not conform to the recommended operation condition of the product, the warranty will not be applicable
- Use of non-recommended consumables causing damage to the product or its performance shall revoke warranty on the product
- If the product is not used in accordance with the instructions mentioned in the instruction / user manual the warranty shall be revoked
- Is the original serial number is removed, obliterated or altered from the product the warranty shall be revoked
- In the event of product failure / issue Hafele India will repair the product through its authroised service franchisee only
- The warranty does not include periodic check-ups, maintenance and repair or replacements of parts due to wear and tear
- In the event of repair / replacement of any part / parts of the product, this warrant will thereafter continue and remain in force only for the unexpired period of the warranty
- The warranty is issued at Mumbai, and courts at Mumbai shall have exclusive jurisdiction over matters covered or flowing from this warranty

